



THE SENSOR CONNECTION

A Division of Harold G. Schaevitz Industries

55 East Long Lake Road # 505 · Troy, MI 48085 USA

Phone: 248-636-1515 · Fax: 248-636-4969

Email: Sales@TheSensorConnection.com · Web: www.TheSensorConnection.com



CHT-FS Sensor Installation Guide:


1. Remove Spark Plug.
2. Place Probe under spark plug bending probe slightly if necessary to clear head casting or any cooling fins (be careful not to break the washer). Make sure the probe washer sits flat on cylinder head.
3. Reinstall spark plug.
4. Proper position of probe should not interfere with any other components.
5. Tighten spark plug to manufacturers specifications.

Bending of flexible stem is not mandatory, but some installations require bending for proper routing. If your installation requires bending, please follow the guidelines below

Correct Bending of Flexible Stem:



Minimum Bend Radius (*R*) = 3/16" (0.187")

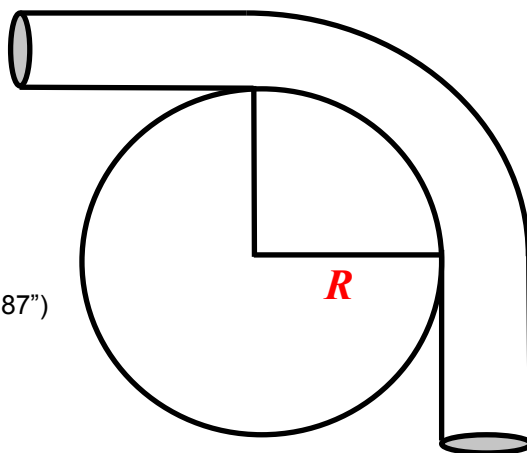

Incorrect Bending of Flexible Stem:

